


Bedienung Kombiofen Heissluft / Mikrowelle

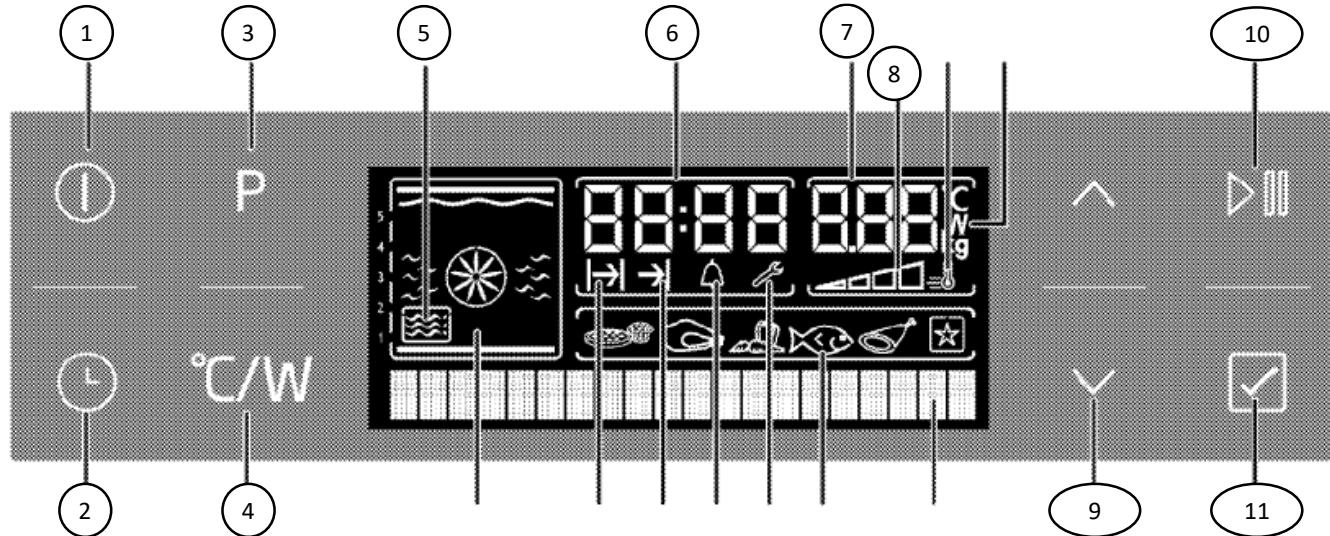

1 on/off

2 timer select

3 program selection

4 power /temperatur /fast heating

5 Microwave selected

6 timer running

7 indication power

8 indication temperature

9 up/down in menu

10 start/pause

11 confirmation

Hot air cooking

- Turn on the pressing long **button 1**
- Press **button 3** and then several times **button 9** to **hot air+**
- Press **button 4** several times until **quick heating** appears, adjust with **button 9** until **Yes** appears. Confirm with **button 11**
- To select the temperature, press **button 4** once and adjust with **button 9**. Confirm with **button 11**.
- Adjust the cooking time setting with press on **button 2** and with **button 9**. Confirm with **button 11**.
- Start with **button 10**.
- at fine: **Happy meal!** appears
- Turn off the oven with **button 1**

Cleaning

Cleaning with **detergent and cloth or non-scratching sponge** as soon as the oven has cooled down. Clean the dirty oven after use, as residues are eaten in flooring!

Microwave cooking

- Turn on the oven with **button 1**
- For choice of power, adjust once to **button 4** and with **button 9**. Confirm with **button 11**.
- Adjust the cooking time setting with press on **button 2** and with **button 9**. Confirm with **button 11**.
- Start with **button 10**.
- At Garende appears: **Good appetite!**
- Turn off the oven with **button 1**

Microwave+defrosting

- Turn on the oven with **button 1**
- Adjust with **button 3** until **microwave and defrosting** appears
- Adjust the cooking time setting with press on **button 2** and with **button 9**. Confirm with **button 11**.
- Start with **button 10**.
- At Garende appears: **Good appetite!**
- Turn off the oven with **button 1**

The gas grill is available outside for grilling.
(see instructions)

WARNING: When door opens makes oven PAUSE! Restart with button 10