


Operation stove

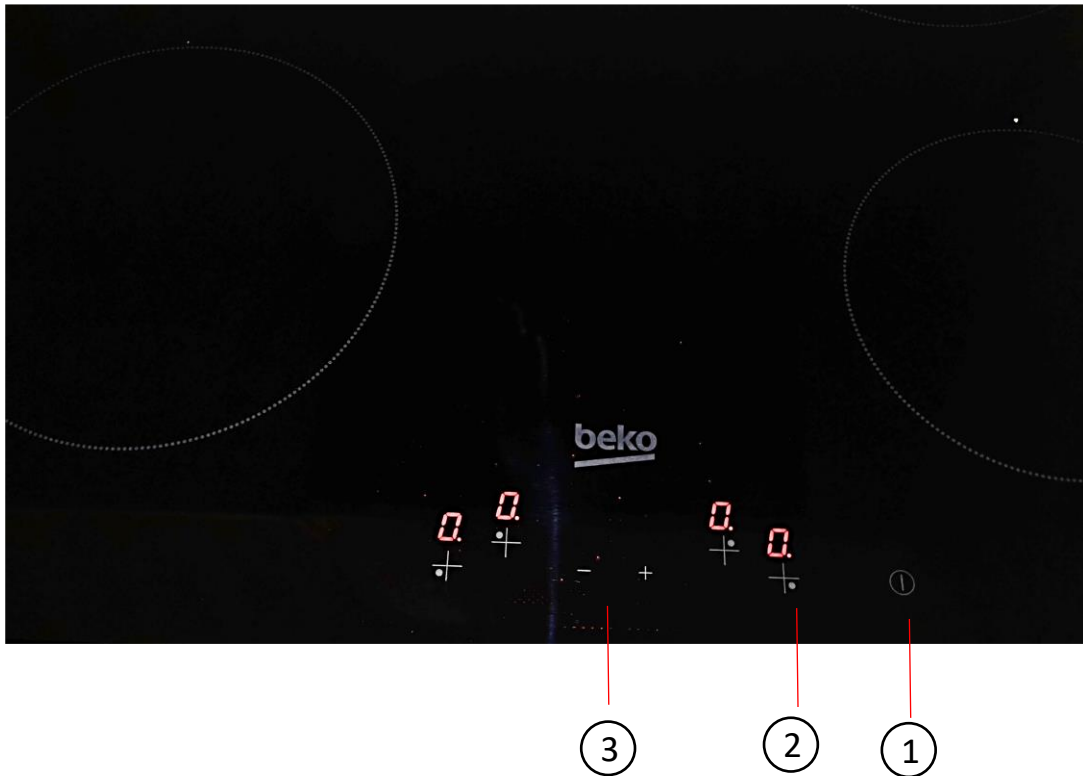

- 1 on/off
- 2 plate selection
- 3 adjust intensity

Turn on

- Turn on the stove with button 1 (press until lights go on)
- Select the stove plate (2) and press + below digit (small dot lights up)
- Adjust intensity with +- button (3)

Changing temperature

- Select the stove plate (2) and press + below digit (small dot lights up)
- Adjust intensity with +- button (3)

Turn off

- Press button 1 until lights go out, respectively display an H (for hot)